

Zhengzhou Audley Digital Control Equipments Co., Ltd

The manual for hot stamping machine of 330 explorer

This Manual Using:

1. Mainboard Version V4.23
2. Foil Control Center V2.4
3. Driver V6.3
4. Artcut date 12th April 2011

HH UUU<http://www.ADL888.com> www.audley-printer.comUUUHHH

Tel:0086-371-55636896 0086-371-65638058

Parameter

Model	Feeding (mm)	Print (mm)	Port	Repeat	Speed (m/h)	Power (w)	Power Source	NW (kg)	GW (kg)
ADL-330B	330	256	网络 U 盘	0.5mm	50-80	350	AC220v 50/60HZ	50	75

Check the equipment and verify spare part

(一) Check the equipment whether there is exist damage phenomenon

① Check the equipment bags whether are in good condition

② Check the equipment whether there exist off paint phenomenon


③ Check the equipment the exterior whether have the phenomenon of variant

Have one spare part box (enclosed list) (We will solve the problem for you promptly, if find the equipment have the above problems or lack of spare part, otherwise don't warrant repair it.)

Assemble equipments

When install please handled with care to avoid machine exterior scratch and influence machine beautiful.

The whole machine assemble depicted

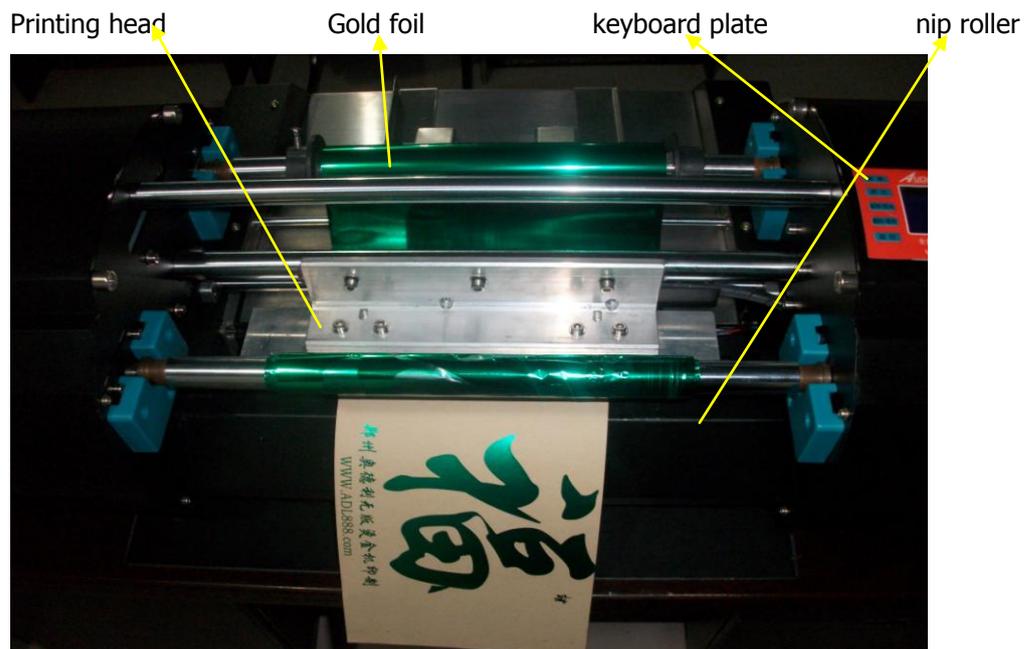

Note: 1. On the nip roller must keep clean, no dust, heavy article, water etc.
 2. Try to put gold and not print medium keep on the middle of components.
 3. Internal control circuit of a high voltage inside, and approved by the authorized to non-professional personnel please don't secretly disassemble and maintenance.

4. Under the print head have enough press power to harm your body, please don't put your hand under the print head.

5. Dust cover is to prevent dust, sundry etc fell to the print head and plastic roller, try not to tear down it.

6. The print head is precision electronic components, please don't use hand directly contact with the print head the surface, not use hard tool collision the print head, the print head surface will not have water droplets.

Ready to print

(一) Before print the matters needing attention

1. Indoor humidity should be about in 55%, temperature in 15 °C-25 °C, when necessary, please use the diffuser and install the air conditioning. (The low and high of the indoor temperature will affect print effects severely).

2. Before open the machine : (1) Must be connect with ground wire effectively, each root ground wire must be individually grounding and shouldn't connect with other machines; (2) The work of the input voltage for 220 V, voltage is too high or too low can cause equipment didn't work properly and it must use the ac 220 V, 2 KW power regulator.(3) Check the print head and aluminum heat sink without water surface carefully and after rubber roller is dry then open machine.

3. Machines placed in dry ventilated place and make sure the machine work environment clean sanitation, no dust; when long-term don't use it, please to the machine to dustproof, moisture-proof measures, don't place liquid on the case.

(二) Install and use of the software

This device equipped with artcut 2010 authorised version software, apply for the artcut version: update the date is April 12, 2011.

1. Install the software

Working “SETUP.EXE” document, click on 'next', choose the installation directory and click 'confirm'.

2. Set software and use

① Set print page (in A4 for example)



"Width" is for the print length, "High" is for the print width, set "256 mm" and choice "horizontal".

② Choose "create new file".

③ Click **T** or click the right mouse button "text input" input to your content, for example



You can according to need through the following tool bar set font properties



④ The detailed set please refer to the artcut software's instructions

⑤ Choose  or through the "file" toolbar, choose "ribbon printing"



Heating power: General according to the environment temperature and print material to adjust it.

Temperature control: Keep acquiesce. It is better not more than 2%.

Walking speed: The numeric is smaller and the speed of the print is faster, but the printing speed too fast will appear data loss phenomenon, generally not less than "15".

Number of replications: Set the same content of the layout of printed times and not be less than 1.

Hollow out print: Keep acquiesce. (330 type machine temporary don't support this function)


Document name: Please name file name of your set layout.

Instructions: Heating power of the numerical value of ribbon to printing media and the bonding strength, the better the more uniform printing effect. But numeric too large will cause burning broken ribbon and print media, especially will blow out the print head.


The method of stall print medium



The install scheme of to be print medium

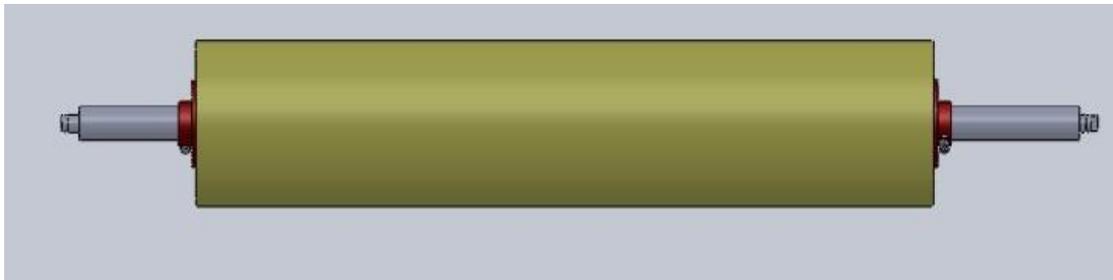

The install scheme of gold foil

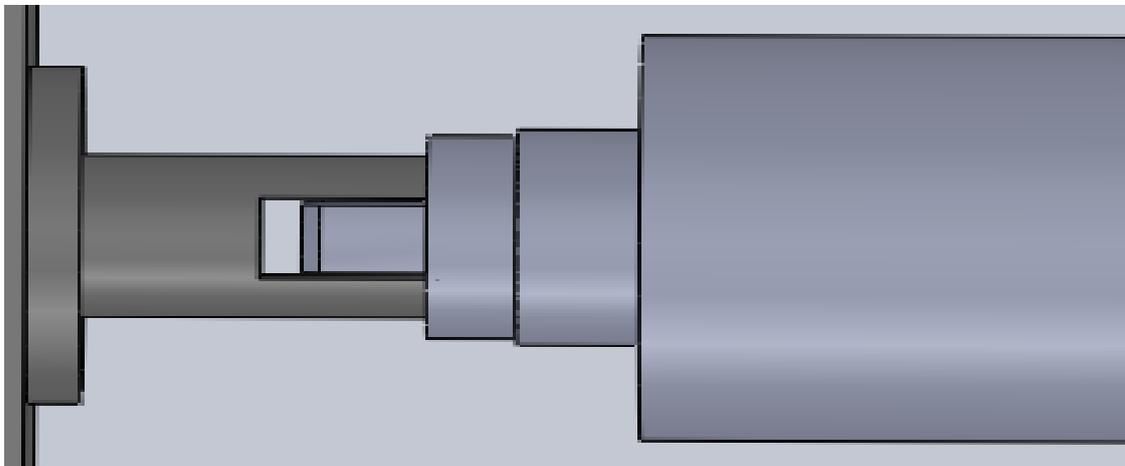

- Note:** 1. When install cloth or gold foil, the cloth axis and the gold foil the flat a head of vertical shaft motor card into the slot, avoid to man-made destruct motor card slot.
2. Please tighten the screw on card materials plate and card gold foil paper plates, in case the material and gold foil during the printing process occurred drape.

(三) operation panel instructions

(1)Open the equipment power supply, the screen display interface as shown in figure, after about five seconds show the mainboard version information



(2)Operation panel



菜单

System information

Printed: Setting have been worked distance

Remainder meters: Display the remainder distance can be printed out. (V3.22 versions are not support)

Card number: Equipment motherboard number

Machine type: Equipment type number

Compile date: Mainbord compile date

SD card: Show "NO" means not inset SD card; Show "Yes" means inset SD card

U disk: Show "NO" means not inset SD card; Show "Yes" means inset SD card

Ink ribbon: Temporary don't support V3.22 version

Numbers of print head: Display equipment to connect the numbers of the print head (330A equipment support one print head)

IP address: Equipment network IP address

Network card type: Equipment Network card type number

Machine date: Show the current date

Machine time: Show the current time

Print head: Show the print head type

Save carbon and delay: Adjust saving carbon with distance

Set parameters

- Language: At present support simplified Chinese character, traditional Chinese character, English interface. According "V -" adjustment.
- Print correct: Generally as the default, such as print a 500mmX500mm color piece, print the actual size for 500mmX600mm, they can adjust the print correct numerical, if actual length is longer than goal length, increase the target print words correcting numerical, contrary to print decrease the value.
- Empty walk correct: The distance between of two texts or the graphic. Generally default to zero, adjust method is the same as "print correcting".
- Each pulse: Adjust the paper pulse of step motor, generally to default 46.
- Print head width: Set the print head width, 330 A select 256.
- Preheating temperature: Set the print head preheating temperature. In general under the 10 °C in the environment to use the machine. Please use it carefully, use undeserved will cause printing effect is poor or damage the print head. In general default zero.
- Preheating strength: Set temperature of heating rate In general under the 10 °C in the environment to use the machine. Please use it carefully, use undeserved will cause printing effect is poor or damage the print head. In general default ten.
- Contrast degree: Adjust LCD screen brightness, generally for default 40.
- Fell head delay: Adjust the print head ups and downs of the delay time for general default zero, but set it to one.
- Into paper pulse: Adjust the forty two step motor into paper pulse, generally for default 0, but set it to more than 4000, otherwise, it will cause the print head fall on rubber roller to reduce the service life of the machine.
- Paper length: Keep the default is zero. Make sure don't to adjust this argument, or you will cause printing poor effect or damage the print head.
- Switch to upgrade mode: Click on the "confirmation" can switch to the mainboard upgrade mode.
- Print the test design: This state click "confirm".

Recovery factory set: Press the "confirmation" button, it will be set back to the factory main board set.

Format: Use for format SD card or U disk.

测试

Press test key under the file properties equipment will be automatically output shown below, the contents help you determine proper print parameters. Can switch over the storage devices.

暂停/取消

Press **暂停/取消** at the machine working process, the machine will finish printing text or graphics, press this button again machine will continue to work. Press return key in the state of break ,print task will be cancelled.

删除/急停

Can delete the document in storage device, press this button in working process with emergency will cancel print task. After press **暂停/取消**, Machine continue to work.

返回

Returns superior menu.

V+

V-

Set parameters.

上翻

下翻

Select menu.

确认

Confirm menu selection and document printing, etc.

(四) Output typing

(1)commissioning

- ①Install the ribbon and cloth in the center of equipment.
- ②Press print head switch and reverse switch to prevent from draping.
- ③Press the "test" button to see printing effect, if the result is not satisfied, please adjust motherboard parameters and the print head position.

(2)Print mode option choose

- ①Online output

First click artcut toolbar **USB设备** Select the option "search".



Choose device after click ok, appears "control center".

Parameter setting, coordinates movement and test keep default values, click "ribbon printing".

All printing parameters setting is finished, choose 立即输出, choose documents you need to print in File management column, and click ok.

②offline print

a. First click artcut toolbar **USB设备** Select the option "search".



Click ok after choose device, appear "control center"

Parameter setting, coordinates movement and test keep default values, click "ribbon printing", click "ok" for data transmission to a storage device after all printing parameters were finished. Next operation in liquid crystal buttons.

b. (1) Confirm your motherboard for 1.09 version, Be sure you use latest version software for artcut 2010 (date modified after April18,2011)

(2) File setting

(3) Search equipment after opened software and equipment

(4) Setup parameters

色带打印

加热功率: 1

温度控制,每升高1度,功率下降 2 %

行走速度: 6 镂空打印

重复次数: 1

输出文件名: test.dat

立即输出

设备存储器 SD卡

PC存储器

打印机宽度: 768

确认

取消

Heating power: Numerical according to material and working surroundings. General between 10 and 30. The bigger of numerical the better of peeling effect, but printing speed will slow. Exceed numerical will burn print medium even the print head.

Temperature control: Current version does not support 3.01, keep default.

Walking speed: The bigger of numerical the slower of equipment operation speed. But too small numerical can cause the data lost, numerical recommendation bigger than 5.

Hollow-out print: Currently not support to 1.09 version.

Repetition time: Print times of same content. For example input 10 if the files should be printed 10 times. Note that numerical should bigger than 1 or device will automatically stop .

Output filename: Save the name of your printed file.

Immediately output: When you select this option click "OK" after above parameters were set and equipment can be normal operation.

Equipment storage: Choose your storage device when net is connected according to your equipment on the mainboard storage devices. If equipment on the mainboard connect

to SD card, you can choose "SD card".

PC memory: Your equipment need not connect to Internet and computer when selecting this option. If you need to offline print put storage device connected to computers first. If your computer default your storage devices for G dish you can choose "G dish", click "ok" after completion of print parameter settings and print documents will default save to G plate. Put your G disks connected to device motherboard and run.

Printer width :Choose your printer width according to print head breadth, input 256.

(三) File print parameter setting

① Select print documents, press the "ok".

Heating power :Adjust heating time, if the numerical is bigger the heating time is longer. But exceed numerical will burn out the ribbon and cloth even print head. Generally between 15-30 relate to environmental temperature, humidity and ribbon melting point.

Hot spot power: The numerical is less than five to ten, Suggest this function in print documents longer than 1000 mm length when use, and ensuring the print head long time heating and doesn't burn broken ribbon. This function in the use of print driver use, artcut software not support.

Edge power: This function in the use of print driver use, artcut software not support.

Temperature control proportion :Default is 1% or 2%. Please keep default in case of print chromatism.

Speed delay: Data transmission speed. General bigger than 5.

Repetitions: Printed times of a same file, not less than 1.

After above parameters settings were finished, press "ok", the equipment can be normal print.

② Screen displays in working process :

Filename: printing file name.

Finish: how many data were finished.


Completion times: printing times of one file.

Temperature control proportion: the temperature of print head inside.

Install printer:

Before use this equipment prior to install print driver, the driver in the user CD. Here to Windows 7 operating system for example, instruct how do you install the driver, first extract your driver. Machine only supports Windows XP/Windows 7 operating system, temporary don't support VISTA. According to the different operating systems, choose your printer; If your operating system is a 32 bit, please choose the 32 bit driver installation, 64-bit operating system please choose 64 a driver installation.

First extract file "audley Setup," According to different computer systems, choose the "Printer Setup. Exe", in the popup dialog box selection. Input printer name, such as "330 A", select printer type "audley Ribbon" click "ok" button. Can complete installation.

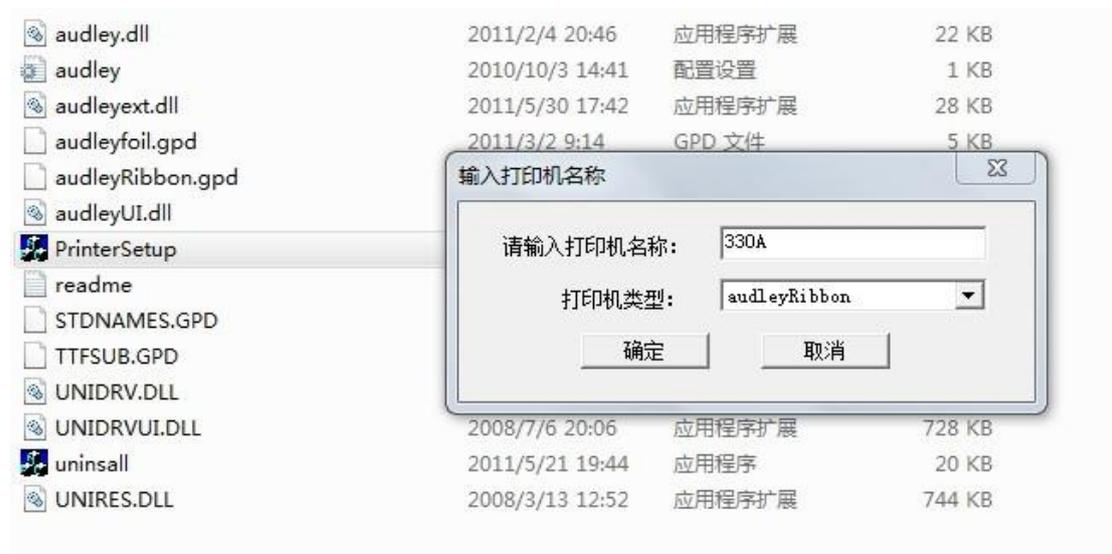

Finish printing work by print driver

Preparation before start: Check the following items before operation and make

sure each is complete:

- ① Equipment already connect to computer.
- ② Has been installed gold foil.
- ③ Computer and equipment were both powered on.
- ④ Printed material already on the stage.
- ⑤ Keep a certain distance between equipment and the surrounding objects, prevent working platform from damage.

Set print task:

Set print task according to following steps:

- 1) Choose a procedure compatible with Windows, for example Corel Draw, Microsoft Word, etc.
- 2) Determine print area.
- 3) Set page size.
- 4) Graphics and text place on the page.
- 5) Set print attribute.
- 6) Place printing materials on the print platform.
- 7) Send print task to printer.


Choose application procedure: Printers use windows-compatible application procedure, Draw Corel as an example

Set page size: Set page size in Corel Draw :

In the use of the equipment, page size is printable area. Another need to set the direction of the page. In this example, page size for 256, page for horizontal direction.



The page margins is set to "0", as shown in figure

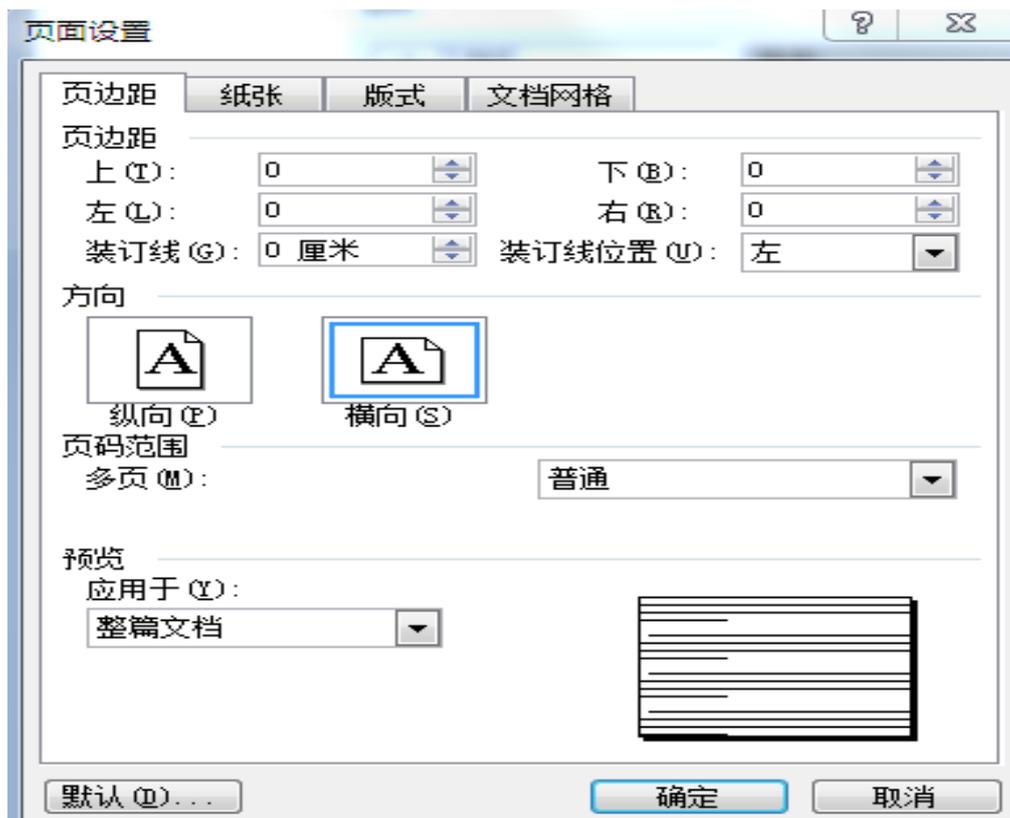


Input print images and text, such as



after printed the image and edit, choose "print"


Printer parameter Set

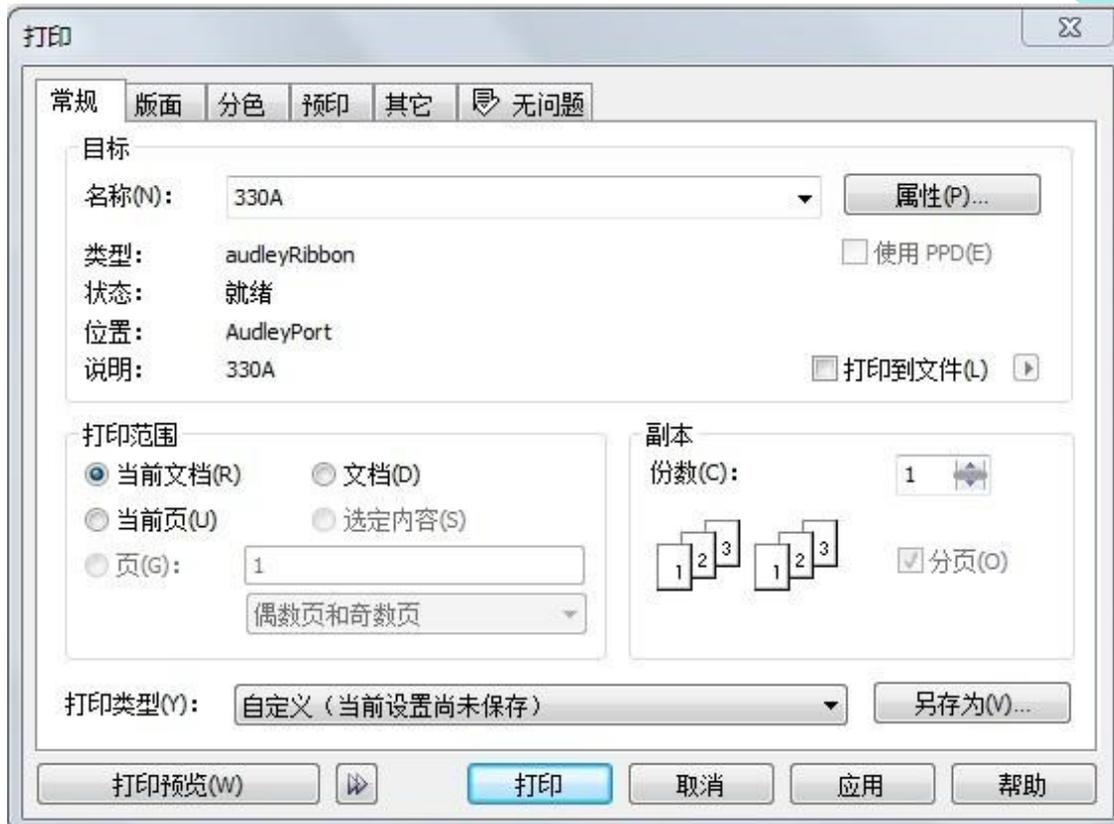

printer name choose "330A", and click "properties"



direction for "vertical", select "advanced"

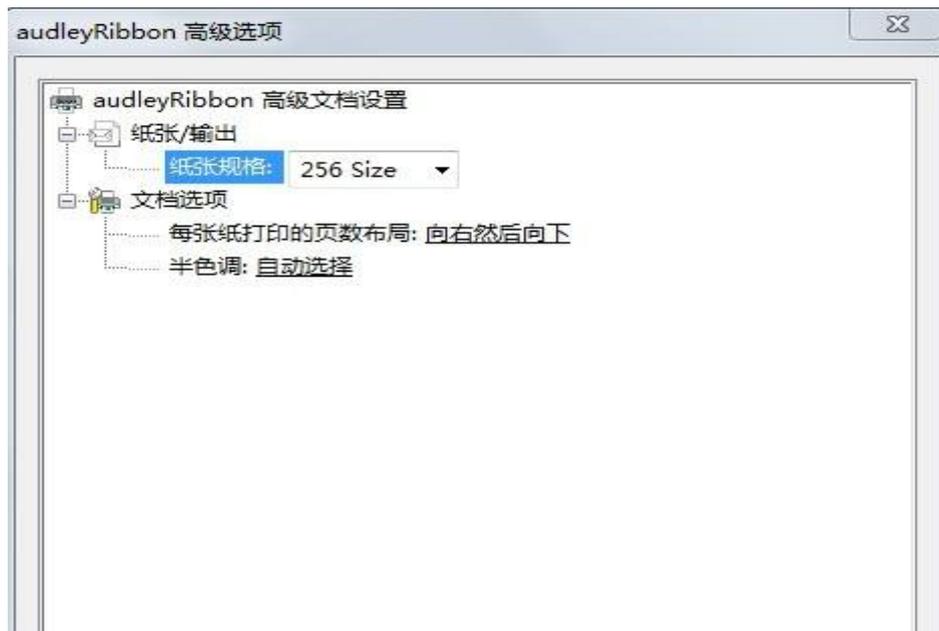

Paper specification for: 256 , the other options keep default.

"Stamping machine advanced options" Settings

Number of copies: Stand for hope print contents of the number printed.

Operation speed: Depend on heating and forcing time of gold foil paper and material media, some combination of gold foil paper and material media need slower speed to print, In order to have more time to complete transfer printing process. Generally do not less than 15.

Pressure: Set to zero

Print strength: Increase print strength can improve the definition and saturation, reduce print strength can prevent gold foil paper melt then adhere to printer head. Increase print speed may increase print strength.

Tip: High print strength may cause gold foil adhesion in print head, please use Audley's gold foil paper, non Audley's gold foil paper may damage to print head.

Margin strength: Increase print strength at printed images and words, it can enhance definition. Pay attention to margin strength is lower than print strength.

Notice: Exceed margin may cause gold foil paper adhere to print head.

Spin: If need spin the image please chose "yes", printed images and words are spin 180°to shown in computer.

Preheating temperature: when print strength and pressure increased can not make good definition and saturation, chose this item.

Y side excursion: keep the default setting.

Mode: Choose "drum" mode.

Notice: Please stop print task at once when the gold foil paper is adhering to printer head, then clean the printer head.

Reserve: Print task setting can reserve for next usage.


Load: read-in pre-stored setting.

Reset: recover leave factory setting.

Send print task

Please operate "Foil Control Center.exe" before send print task

When print parameters are seted, press "OK", "print", control center dialog box appears.

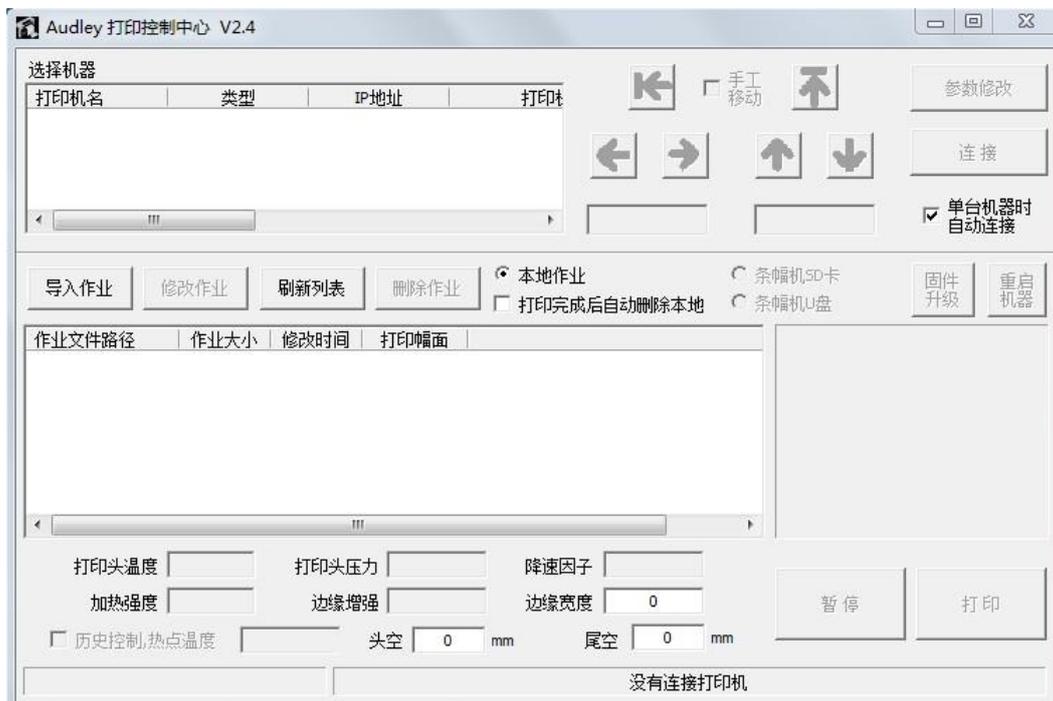


Chose equipment: Chose operating equipment;

Load task: Load your pre-print task which is unfinished;


Cancel task: Cancel the task which is not needed;

Modify task: If you are not satisfied with the printed task, you can modify here; such as:

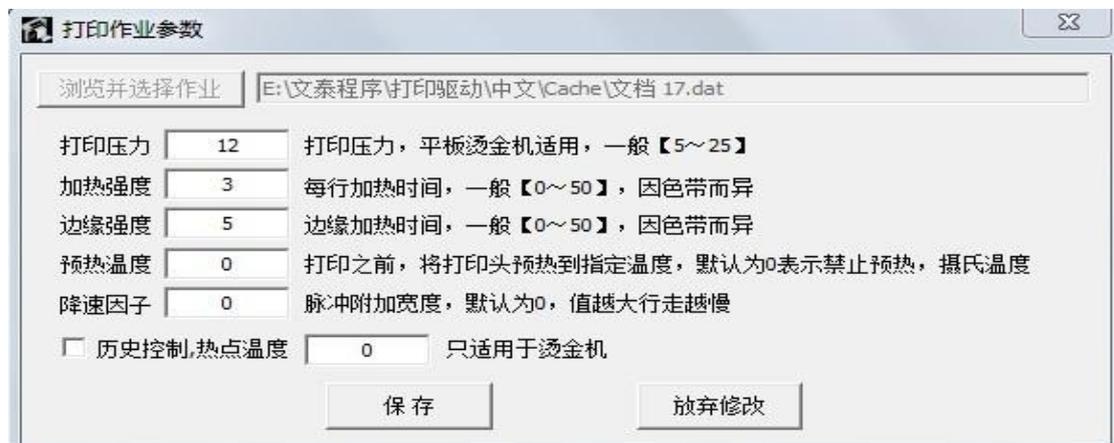


"Reduction of speed factor" keep default setting, others reference "stamping advanced options" setting.

Press "reserve" after setting, and chose "browse and chose task" to modify task which reserved before.

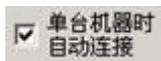

when chose this, also computer and product are both power on, equipment will link to net automatic. when not chose this, equipment will link to net only press "link".

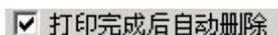

when chose this, print task will cancel automatic after printed, so please chose with caution.



Manual movement only make effect in connection, when chose manual movement you can move printer head up and down and working board left and right according to requirements. Used for flat-panel printers, this function can't apply 330 models.




Show the coordinate of printer head and working board,

X means working board, Z means printer head side. This function can't apply 330 models.

作业文件路径	作业大小	修改时间	打印幅面
C:\Documents and Settings\Administrator\桌面\Cache\2.dat	19.75 KB	2011-01-27 15:22:26	50 x 76

It shows reserve path, document size, modify time and print breadth of print task.

Parameters set(330 A machine does not support this function)

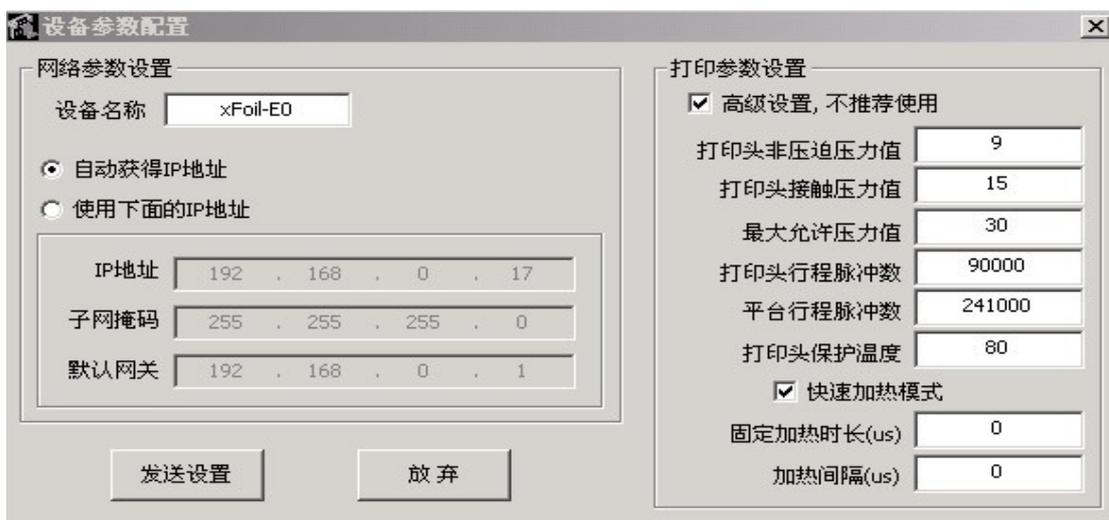


This function only make effect when computer and product are not connect.

Equipment mane is net name of current equipment.

IP address is obtain automatic.

Advanced options of print parameter

It is only for manufacturer adjusting, others adjusting will cause damage.

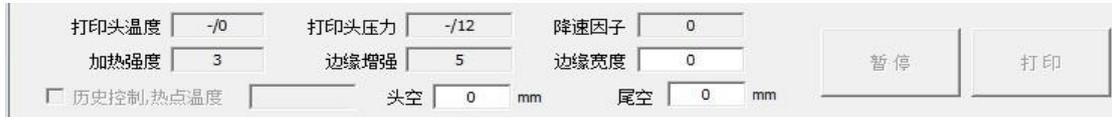

The screenshot shows a control panel with the following elements:

- 打印头温度:
- 打印头压力:
- 降速因子:
- 加热强度:
- 边缘增强:
- 边缘宽度:
- 历史控制, 热点温度:
- 头空: mm
- 尾空: mm
- 暂停 (Pause) button
- 打印 (Print) button

Printer head temperature: Numerator means current printer head temperature, denominator means setting temperature;

Printer head pressure: numerator means current printer head pressure, denominator means setting pressure;

Reduction of speed factor: keep default setting;

Heating strength: means current print task heating strength;

Edge enhancement: means current print task edge enhancement temperature;

All above settings are finished, then choose print task and begin to print.

Not the equipment at present introduces option representative does not support this function.